

# Pacific TRUCK AND TRAILER LTD.

## PARTS RECORD SHEETS TRUCK

CUSTOMER PERCY LOGGING CO. LTD. MODEL P-10  
207 W. HASTINGS ST. SERIAL T-7688-927  
VANCOUVER, B.C. REQ. 5850  
 DELIVERED JULY 8, 1976  
 WEIGHT 26,450 (14,260 FR.)

DEALER PACIFIC TRUCK & TRAILER LTD. DEALER DELIVERY \_\_\_\_\_

### SECTION 10 - ENGINE

MODEL CUMMINS NTC-350 SERIAL 10530209 SPEC 1054  
 FUEL PUMP PT-IN-LINE SERIAL 0160-3070-1147659-AR 41024-15699  
 BELTS - FAN 134809 WATER PUMP 215356 GEN./ALT. 178427  
 ELEMENTS- FULL FLOW 158139 BY-PASS \_\_\_\_\_ WATER 299083

### ILLUSTRATIONS & PARTS LISTS

ENGINE	NIL	PL-10-1000-03
ENGINE INSTALLATION	ILL-10-1001-03	PL-10-1001-03
CLUTCH	NIL	PL-10-1002-03
AIR ASSIST	NIL	NIL
ENGINE BRAKE	NIL	PL-10-1003-06
BLOCK HEATER	NIL	NIL
OIL PAN HEATER	NIL	NIL
EXHAUST PYROMETER	NIL	PL-10-1006-01
THERMATIC FAN	NIL	NIL
AIR CLEANER	ILL-10-1008-05	PL-10-1008-05
AIR DIVERTER	NIL	NIL
AIR CLEANER-CHROME	NIL	NIL
HAND THROTTLE	NIL	PL-10-1009-01
KYSOR ALARM & SHUTDOWN	NIL	PL-10-1010-02
LUBE OIL FILTER	NIL	PL-10-1011-01 ✓
CHROME OIL FILTER	NIL	NIL
STARTING AID	NIL	PL-10-1012-01
EXHAUST	ILL-10-1013-06	PL-10-1013-06
EXHAUST - CHROME	NIL	NIL

### SECTION 20 - MAIN TRANSMISSION

MODEL SPICER 1263-A SERIAL 2028520 B/M. N<sup>o</sup>. 300834-4 SPEC. 2014

### ILLUSTRATIONS & PARTS LISTS

MAIN TRANSMISSION	NIL	PL-20-1000-01
TRANS. INSTALLATION	ILL-20-1001-01	PL-20-1001-01
CLUTCH CONTROLS	ILL-20-1002-03	PL-20-1002-03
POWER TAKE-OFF	NIL	NIL

MODEL P-10  
 SERIAL T-7688-927

SECTION 30 - AUXILLIARY TRANSMISSION

MODEL SPICER 1241-D SERIAL 2163955 B/M. N° 300978-7 SPEC. 3013

ILLUSTRATIONS & PARTS LISTS

AUX. TRANSMISSION	<u>NIL</u>	<u>PL-30-1000-03</u>
TRANS. INSTALLATION	<u>ILL-30-1001-03</u>	<u>PL-30-1001-03</u>
POWER TAKE-OFF	<u>NIL</u>	<u>NIL</u>

SECTION 40- DRIVE LINES

RUNNING LENGTH - (FWD.) 37 1/4" F-F (CTR. or CTR. BEARING) 41 1/4" F-C  
 (INTERAXLE) 25" C-C (ADD. STEADY BEARING) \_\_\_\_\_

ILLUSTRATIONS & PARTS LISTS

FORWARD	( <u>1710</u> )	<u>ILL-40-1000-01</u>	<u>PL-40-1000-01</u>
INTERMEDIATE	( <u>1810</u> )	<u>ILL-40-1001-01</u>	<u>PL-40-1001-01</u>
INTERAXLE	( <u>1710</u> )	<u>ILL-40-1002-01</u>	<u>PL-40-1002-01</u>
ADD. STEADY BRG.	( <u>--</u> )	<u>NIL</u>	<u>NIL</u>

SECTION 50- PARKING BRAKE

MODEL MAXI TYPE 36 QTY. ONE AXLE

ILLUSTRATIONS & PARTS LISTS

PARKING BRAKE	<u>ILL-50-1000-04</u>	<u>PL-50-1000-04</u>
---------------	-----------------------	----------------------

SECTION 60- STEERINGILLUSTRATIONS & PARTS LISTS

STEERING	<u>ILL-60-1001-01</u>	<u>PL-60-1001-01</u>
----------	-----------------------	----------------------

SECTION 70 - FRONT AXLE

MODEL ROCKWELL FL-931-PX-51 SERIAL N208142 SPEC. 7061  
 TRACK 80 BRAKE SIZE 16 1/2 x 5

ILLUSTRATIONS & PARTS LISTS

FRONT AXLE	<u>NIL</u>	<u>PL-70-1000-01</u>
WHEELS	<u>NIL</u>	<u>PL-70-1001-02</u>
RIMS	<u>NIL</u>	<u>PL-70-1002-03</u>
OIL SEALS	<u>NIL</u>	<u>NIL</u>
SUSPENSION	<u>ILL-70-1004-01</u>	<u>PL-70-1004-01</u>
SHOCK ABSORBERS	<u>NIL</u>	<u>NIL</u>

SECTION 80- REAR AXLE

MODEL CLARK BD-71,000 RATIO 10.615:1 SPEC 8097

TRACK 90" BRAKE SIZE 20x7 AXLE SPACING 60"

FORWARD AXLE 191733 SERIAL 414223

REAR AXLE 191734 SERIAL 414226

FWD CARRIER 124270 REAR CARRIER 124289

MODEL P-10  
 SERIAL T-7688-927

SECTION 80-REAR AXLE (CONTINUED)ILLUSTRATIONS & PARTS LISTS

REAR AXLES	<u>NIL</u>	<u>PL-80-1000-05</u>
WHEELS	<u>--</u>	<u>--</u>
RIMS	<u>NIL</u>	<u>PL-80-1002-04</u>
OIL SEALS	<u>NIL</u>	<u>NIL</u>
INTERAXLE DIFF.	<u>NIL</u>	<u>NIL</u>
REMOTE AXLE BREATHER	<u>NIL</u>	<u>PL-80-1005-01</u>
TWO SPEED CONTROL	<u>NIL</u>	<u>NIL</u>
REAR SUSPENSION	<u>ILL-80-1007-03</u>	<u>PL-80-1007-03</u>
STEERING YOKE	<u>NIL</u>	<u>NIL</u>
SHOCK ABSORBERS	<u>NIL</u>	<u>NIL</u>

SECTION 90- TIRES

FRONT UNIROYAL SIZE 1200x24 - 16PLYTREAD RIB - NYLON  
 REAR UNIROYAL SIZE 1200x24 - 16PLYTREAD SUPER LOGGER NYLON

SECTION 100- FRAME

FRAME LAYOUT FL-70000-K W.B. 215 C.A.            A.F. 108

ILLUSTRATIONS & PARTS LISTS

FRAME	<u>ILL-100-1001-01</u>	<u>PL-100-1001-01</u>
BUMPER	<u>ILL-100-1010-01</u>	<u>PL-100-1010-01</u>
GRILL GUARD	<u>ILL-100-1011-01</u>	<u>PL-100-1011-01</u>
REAR CROSSMEMBER	<u>ILL-100-1012-02</u>	<u>PL-100-1012-02</u>
BATH COMPENSATOR	<u>NIL</u>	<u>PL-100-1013-04</u>

SECTION 110 - COOLING SYSTEMILLUSTRATIONS & PARTS LISTS

RADIATOR INSTALLATION	<u>ILL-110-1000-01</u>	<u>PL-110-1000-01</u>
-----------------------	------------------------	-----------------------

SECTION 120- ELECTRICAL

SYSTEM 24 VOLT GROUND NEGATIVE BATTERIES 4-6 VOLT GR-5-D  
 GENERATOR/ALTERNATOR DELCO REMY 1100077 SERIAL 75M11  
 STARTER DELCO REMY 1113887 SERIAL 75M17 REGULATOR INTEGRAL SERIAL           

ILLUSTRATIONS & PARTS LISTS

CAB ELECTRICAL	<u>NIL</u>	<u>PL-120-1000-04</u>
FRAME ELECTRICAL	<u>NIL</u>	<u>PL-120-1000-05</u>
ALTERNATOR INSTALLATION	<u>--</u>	<u>--</u>
CAB MARKER LIGHTS	<u>NIL</u>	<u>NIL</u>
BATTERY INSTALLATION	<u>ILL-120-1003-03</u>	<u>PL-120-1003-03</u>
BATT. ISOLATION SWITCH	<u>NIL</u>	<u>PL-120-1004-01</u>
HEADLIGHTS	<u>NIL</u>	<u>PL-120-1005-02</u>
TURN INDICATORS	<u>NIL</u>	<u>NIL</u>
ELECTRIC HORN	<u>NIL</u>	<u>NIL</u>
BACK-UP LIGHT	<u>NIL</u>	<u>NIL</u>

MODEL P-10SERIAL T-7688-927SECTION 120 - ELECTRICAL (CONTINUED)

DRIVING LIGHT	<u>NIL</u>	<u>NIL</u>
SPOT LIGHT	<u>NIL</u>	<u>NIL</u>
ROOF FLASHER	<u>NIL</u>	<u>NIL</u>
TRAILER CONNECTION	<u>NIL</u>	<u>NIL</u>
RADIO	<u>NIL</u>	<u>NIL</u>

SECTION 130 - AIR SYSTEMSCHEDULE "L" TWO COMPRESSOR @ 12 C.F.M.

FORWARD COMPRESSOR	<u>CUMMINS</u>	BELT	<u>NIL</u>
2ND COMPRESSOR	<u>282139</u>	BELT	<u>28480</u>

ILLUSTRATIONS & PARTS LISTS

AIR SYSTEM INSTALLATION	<u>NIL</u>	<u>PL-130-1000-01</u>
COMPRESSOR	<u>NIL</u>	<u>PL-130-1001-01</u>
FRONT WHEEL BRAKES	<u>NIL</u>	<u>PL-130-1002-01</u>
ALCOHOL EVAPORATOR	<u>NIL</u>	<u>NIL</u>
MOISTURE EJECTION VALVE	<u>NIL</u>	<u>NIL</u>
AIR DRYER	<u>NIL</u>	<u>NIL</u>
WIG WAG	<u>--</u>	<u>--</u>
AIR HORN	<u>NIL</u>	<u>PL-130-1007-01</u>
SNOW SHIELD	<u>NIL</u>	<u>NIL</u>
TRAILER AIR CONNECTOR	<u>NIL</u>	<u>PL-130-1008-01</u>
LOW PRESS. IND. LIGHT	<u>NIL</u>	<u>PL-130-1006-01</u>

SECTION 140 - INSTRUMENTSSPEEDOMETER ADAPTER 777-B RATIO .6862 CABLE LENGTH --ILLUSTRATIONS & PARTS LISTS

BASIC INSTRUMENTS	<u>NIL</u>	<u>PL-140-1000-01</u>
TACHOMETER	<u>NIL</u>	<u>PL-140-1001-01</u>
SPEEDOMETER	<u>NIL</u>	<u>PL-140-1002-01</u>
TRANSMISSION TEMP GAUGE	<u>NIL</u>	<u>PL-140-1003-04</u>
AXLE TEMP GAUGE	<u>NIL</u>	<u>PL-140-1004-02</u>
HEATER	<u>NIL</u>	<u>PL-140-1005-03</u>
AIR CONDITIONING	<u>NIL</u>	<u>NIL</u>
WINDSHIELD WIPERS	<u>NIL</u>	<u>PL-140-1007-01</u>
WINDSHIELD WASHER	<u>NIL</u>	<u>PL-140-1008-01</u>
ENGINE HOUR METER	<u>NIL</u>	<u>NIL</u>
EXTRA DEFROSTER FAN	<u>NIL</u>	<u>NIL</u>
OIL PRESSURE GAUGE	<u>NIL</u>	<u>PL-140-1011-01</u>

SECTION 150 - FUEL SYSTEMILLUSTRATIONS & PARTS LISTS

FUEL SYSTEM	<u>ILL-150-1000-04</u>	<u>PL-150-1000-04</u>
FUEL SIGHT GAUGE	<u>NIL</u>	<u>NIL</u>
FUEL/WATER SEPARATOR	<u>NIL</u>	<u>NIL</u>
FUEL FILTER	<u>--</u>	<u>--</u>

MODEL P-10SERIAL T-7688-927SECTION 160 - CABILLUSTRATIONS & PARTS LISTS

CAB TRIM	<u>ILL-160-1000-01</u>	<u>PL-160-1000-01</u>
DOOR TRIM	<u>ILL-160-1001-01</u>	<u>PL-160-1001-01</u>
SOUND PROOFING	<u>NIL</u>	<u>NIL</u>
CAB INSTALLATION	<u>ILL-160-1003-01</u>	<u>PL-160-1003-01</u>
DRIVERS SEAT	<u>NIL</u>	<u>PL-160-1004-01</u>
SWAMPERS SEAT	<u>NIL</u>	<u>PL-160-1005-01</u>
TOOL BOX	<u>NIL</u>	<u>PL-160-1006-01</u>
MIRROR	<u>ILL-160-1007-02</u>	<u>PL-160-1007-02</u>
REAR WINDOW	<u>ILL-160-1008-02</u>	<u>PL-160-1008-02</u>
PROTECTION SCREEN (RW)	<u>NIL</u>	<u>NIL</u>
SUN VISOR - INTERIOR	<u>NIL</u>	<u>PL-160-1010-01</u>
SUN VISOR - EXTERIOR	<u>NIL</u>	<u>NIL</u>
SEAT BELTS	<u>--</u>	<u>--</u>

SECTION 170 - HOOD & FENDERSILLUSTRATIONS & PARTS LISTS

HOOD & FENDERS	<u>ILL-170-1000-01</u>	<u>PL-170-1000-01</u>
----------------	------------------------	-----------------------

SECTION 180 - PAINTILLUSTRATIONS & PARTS LISTS

PAINT	<u>--</u>	<u>--</u>
-------	-----------	-----------

SECTION 190 - ACCESSORIESILLUSTRATIONS & PARTS LISTS

ACCESSORIES & SERVICE	<u>NIL</u>	<u>PL-190-1000-01</u>
LUBRICATION	<u>NIL</u>	<u>PL-190-1001-01</u>
WHEEL WRENCH & HANDLE	<u>_____</u>	<u>_____</u>
MUD FLAPS	<u>_____</u>	<u>_____</u>
FIRE EXTINGUISHER	<u>_____</u>	<u>_____</u>
FLAGS & FLARES	<u>_____</u>	<u>_____</u>
HYDRAULIC JACK	<u>_____</u>	<u>_____</u>
TOOL KIT	<u>_____</u>	<u>_____</u>

